


101619101

NO.	NAME OF PART	QUANT	MATERIAL	FINISH	NOTE

namco

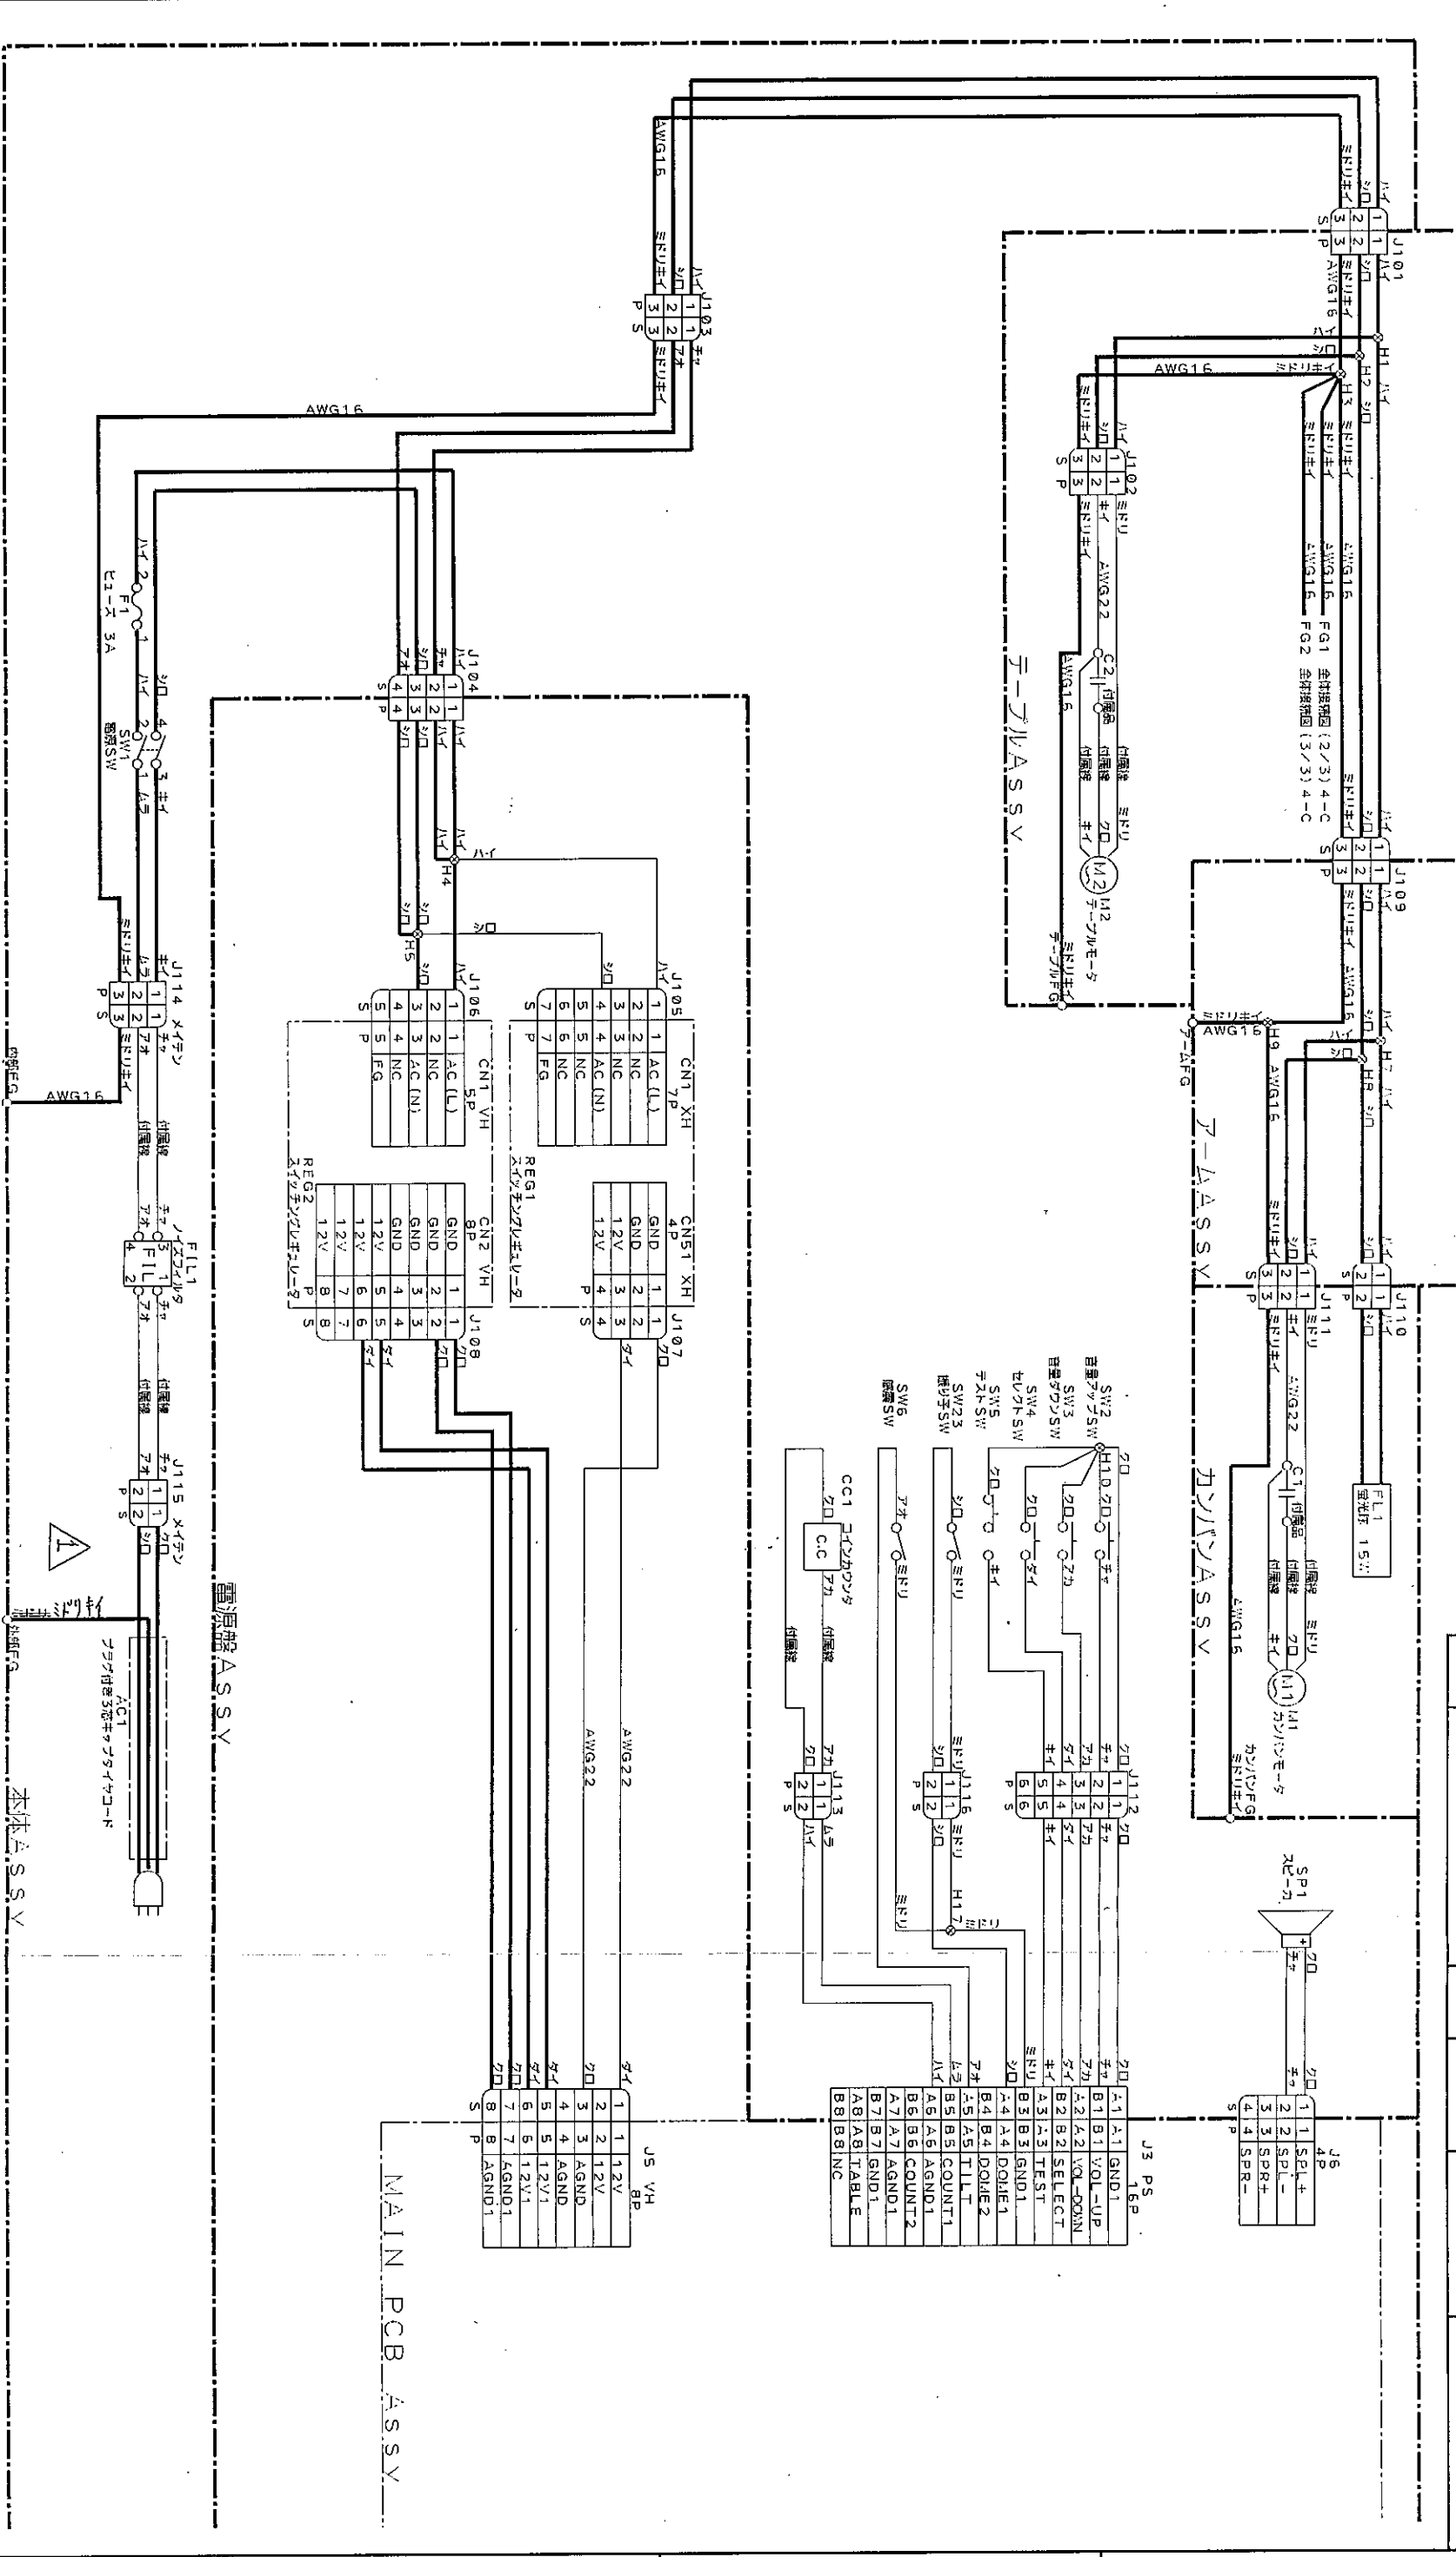

4-D, 線色変更箇所
'02.6.14 AM CG 市村

注1. 指定変更箇所はAWG24、指定変更本線はAWG18を示す。
注2. 指定変更箇所はミニマインテックを示す。
注3. & は別冊図を指す。


訂正出図
02.6.17

DRAWING	DESIGN	CHECKED	APPROVED	SCALE	TITLE
平野	平野	平野	平野	1/1	全体接続図 (1/3)
99.9.6	99.9.6	99.9.10	99.9.10		
NAMCO LIMITED					Draw No.
					16419101

10161491



NO.	NAME OF PART	QUANT	MATERIAL	FINISH	NOTE

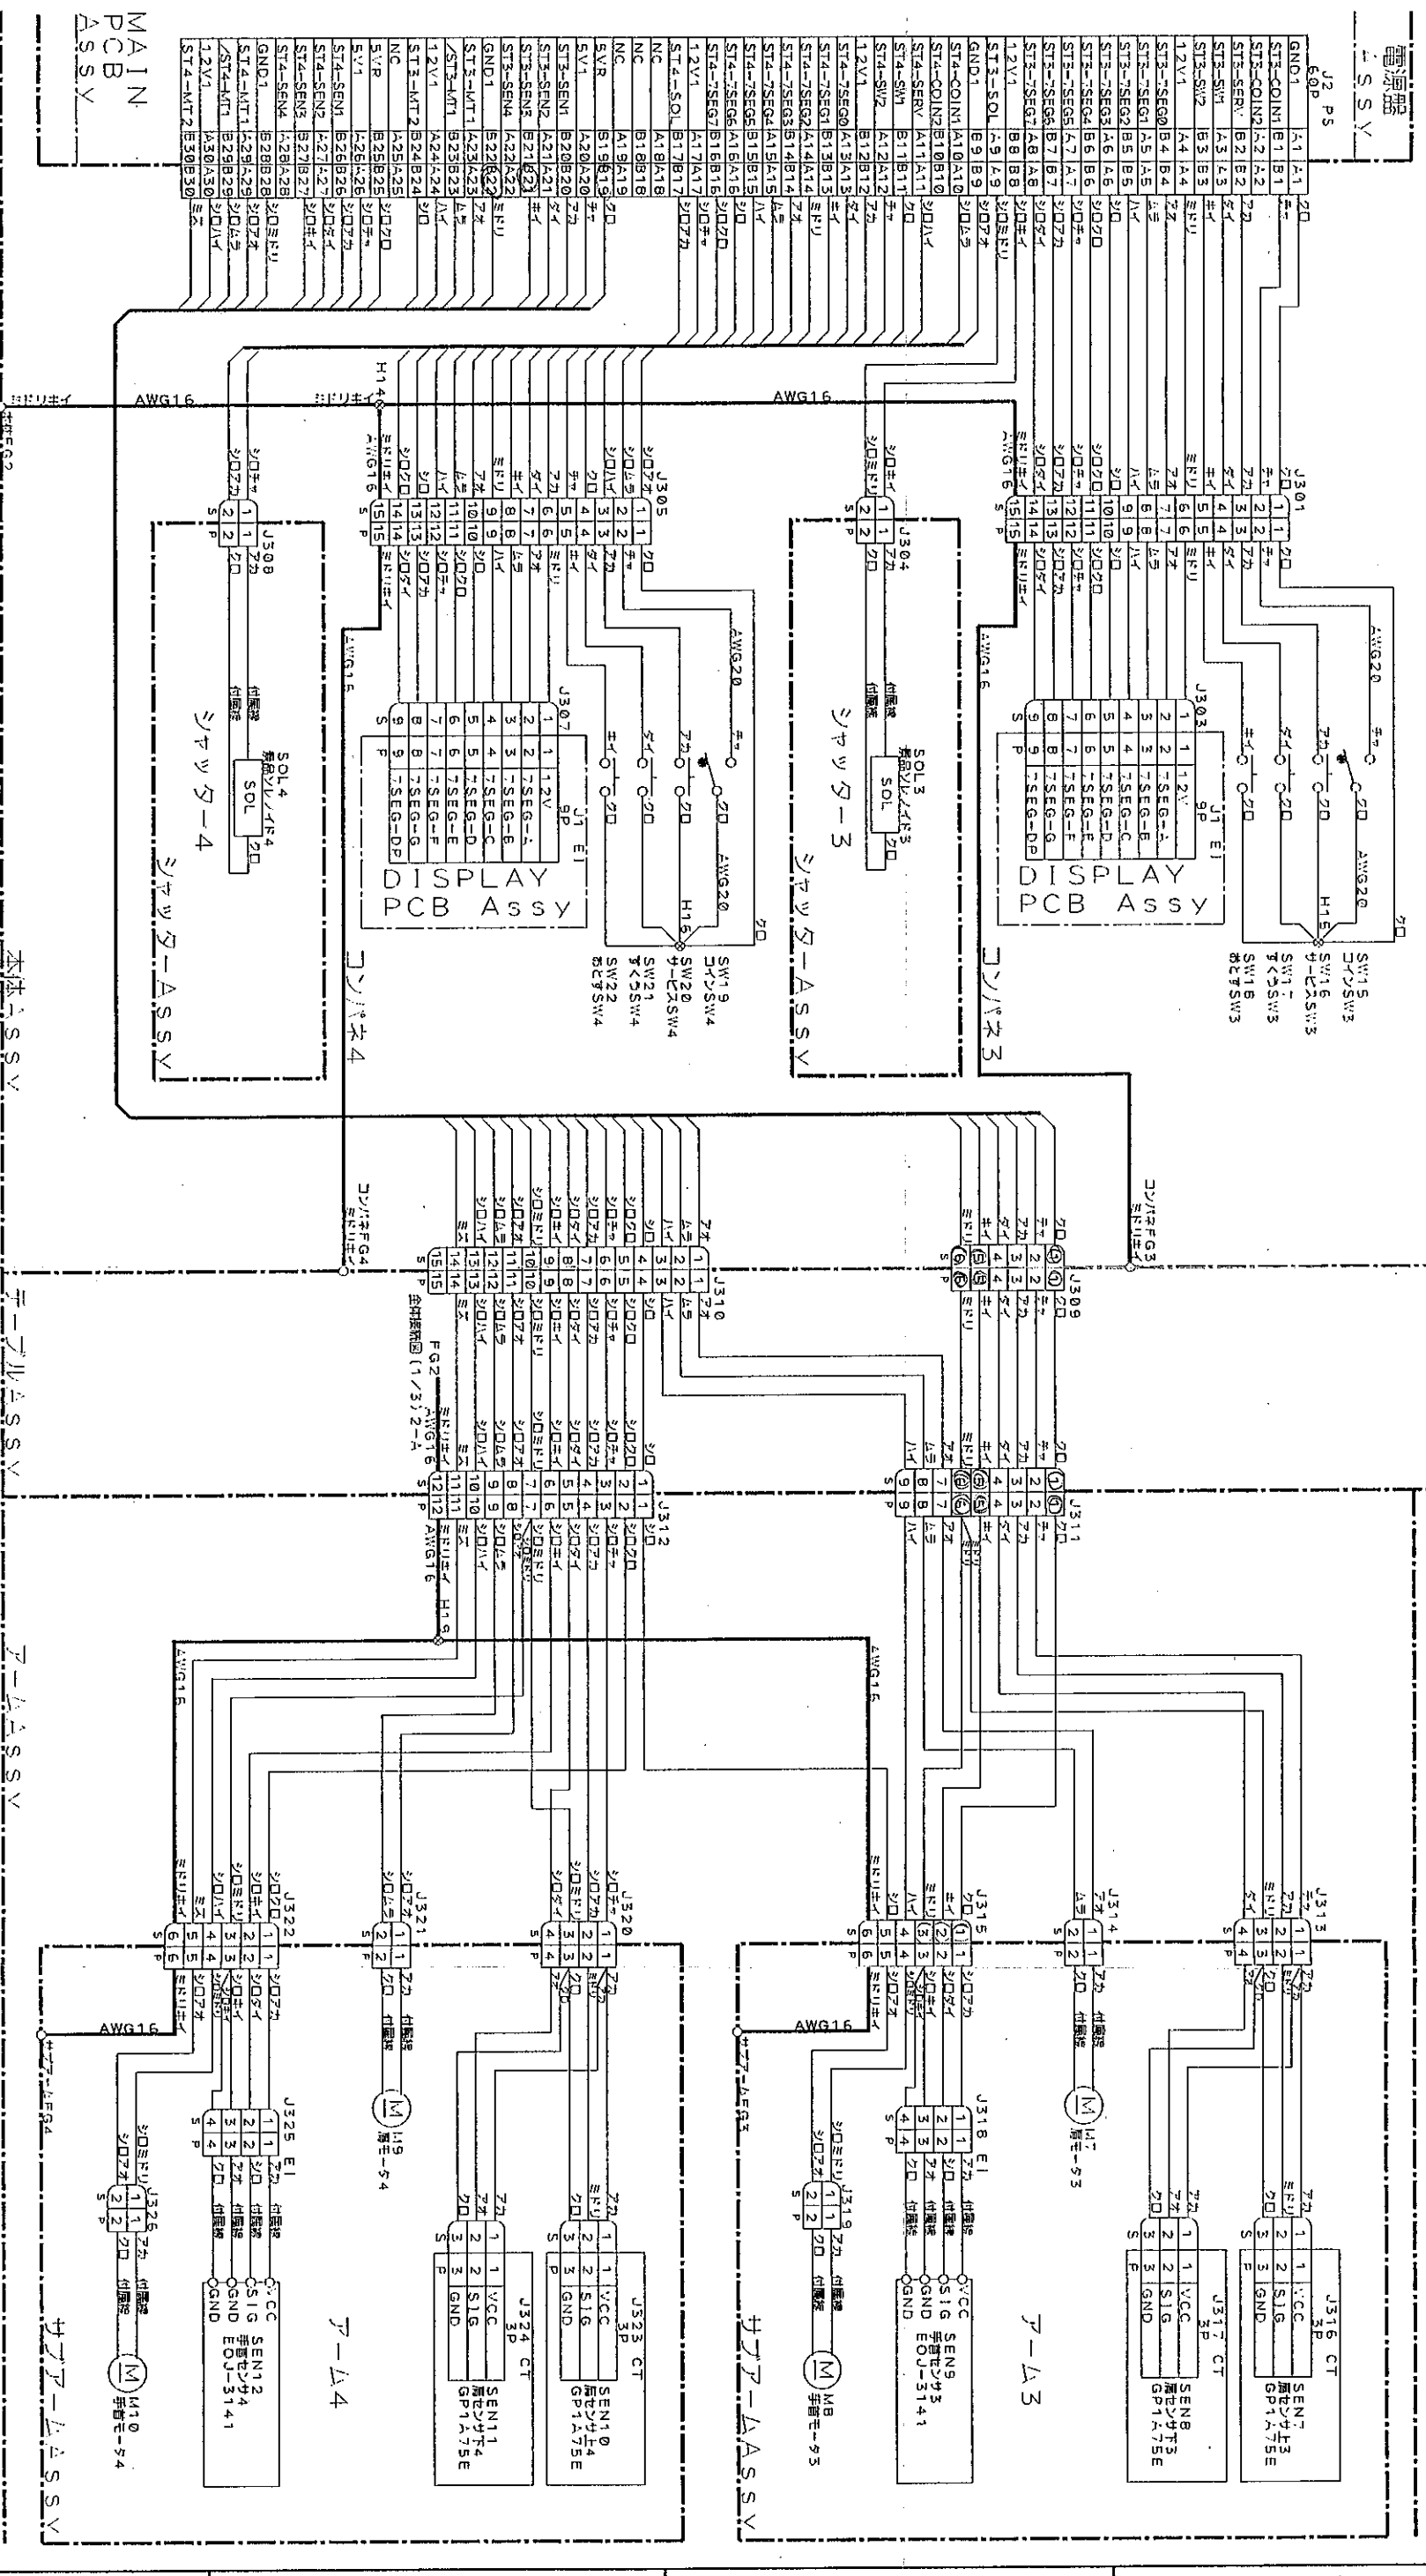

注1. 指定の部品はAWG2.4, 指定の部品はAWG.8を示す.
 注2. 指定の部品はミニマテンドロウを示す.
 注3. ※は閉鎖端子を示す.

出 1999. 9. 13
 開発部本部
 閉鎖部

DRAWING	DESIGN	CHECKED	APPROVED	SCALE	TITLE
平野	平野	1999.9.10	1999.9.10	1:1 4/3	全体接続図 (3/3)
DRAWING NO. 16419101					

SWEETLANDS 4 Setting Mode

1. Open the maintenance door.
2. Turn the Teast switch ON whilst pressing the Select Switch.
3. The item and current setting are displayed on the 7 SEG LED displays on the control panels both left and right of the maintenance door.
4. Pressing the 'Scoop Up' button, the left hand control panel will change the Item. Pressing the 'Scoop Up' button the right hand control panel will change the Setting.
5. When adjustments are completed, turn the Test switch OFF to store the new settings.
* *Turning the Test switch OFF whilst pressing the Select switch will return the settings to their default values.*

Item	7 SEG LED Display		Content
	Control Panel Left	Control Panel Right	
1. Game Mode	1	1 ~ 3	Selects the game mode 1. Normal Mode (default) 2. Special Mode 3. Free Play
2. Coin Count	1	1 ~ 9	Selects the number of coins for 1 credit (default 1)
3. Play Count	1	1 ~ 9	Selects the number of games for 1 credit (default 1)
4. Special Mode	2	1 ~ 6	Selects the time of special play 1. 20 seconds 2. 30 seconds 3. 40 seconds 4. 50 seconds 5. 60 seconds 6. 100 seconds
5. BGM	5	0 ~ 9	Selects the BGM volume
6. Seismoscope	3	0 ~ 4	Selects the sensitivity of the seismoscope 1. OFF 2. Very Sensitive 3. Normal 4. Soft
7. Pendulum	1	0 ~ 1	0. OFF 1. ON
8. Time of Shovel Operation	0	0 ~ 9	Selects the time of Shovel Operation 0. Automatic (default) * <i>Please set to 0</i>
9. Language	2	0 ~ 2	0. No Voice 1. Japanese (default) 2. English

SWEETLANDS 4 Setting Mode

- Error 1 (COIN ERROR) : Coin switch is defective or coin jammed
- Error 2 (ARM ERROR) : Arm drive motor is defective or photo sensor for arm is defective
- Error 3 (SHOVEL ERROR) : Shovel drive motor is defective or photo sensor for shovel is defective
- Error 4 (COIN ERROR) : Coin counter is defective
- Error 5 (SERVICE SWITCH ERROR) : Service switch is defective